

Optimile OCPP setup



Introduction

This document describes the configuration options needed to connect an OCPP charging point to an Optimile platform.

Optimile supports OCPP 1.5 and 1.6 using the standard SOAP transport or alternatively using a JSON/Websocket based transport.

Last update: 2019-10-09

Using New (Simpoint) SIM cards

Use the following parameters when configuring a device with a Simpoint SIM card. Simpoint SIM cards have an ICCID that starts with the digits 893108.

SIM parameters	
APN	optimile
Username and password	Leave blank or use any value
OCPP parameters	
OCPP JSON 1.5 or 1.6 URL	wss://proxy.optimile.eu/services/ocppj
OCPP SOAP 1.5 URL	https://proxy.optimile.eu/services/ocpp15s
OCPP SOAP 1.6 URL	https://proxy.optimile.eu/services/ocpp16s

Using Old (Aspider) SIM cards

Use the following parameters when configuring a device with an Aspider SIM card. Aspider SIM cards have an ICCID that starts with the digits 891039.

SIM parameters	
APN	cpo.apn.name
Username and password	Leave blank or use any value
OCPP parameters	
OCPP JSON 1.5 or 1.6 URL	ws://185.26.126.99/services/ocppj
OCPP SOAP 1.5 URL	http://185.26.126.99/services/ocpp15s
OCPP SOAP 1.6 URL	http://185.26.126.99/services/ocpp16s

Using an Internet Connection

Use the following parameters when configuring a device using a wired or wifi Internet connection.

OCPP parameters	
OCPP JSON 1.5 or 1.6 URL	wss://proxy.optimile.eu/services/ocppj
OCPP SOAP	Not recommended