

Connect remote control to receiver

Turn on the main switch.

- A. Remove the plastic tag from the battery on the back of the remote. Please Note: Avoid touching the battery with bare hands while removing the tag.
- B. Press and hold the learning key on the receiver for 5 seconds, to erase its memory.
The light will flash twice to confirm.
- C. Press 1/4 second (very short click) on the learning key.
- D. Press immediately afterwards (also a short click) the ▼ or ▲ button on the remote to connect the receiver to a zone. The LED light will flash once to confirm. The receiver is now connected to a zone.
- E. Repeat steps B and C to link multiple receivers to the remote control.

Features:

- Multiple receivers can be connected to one zone. All receivers linked to a zone, respond simultaneously.
- One receiver can be linked to multiple zones.

Dimming

- E. Press and hold the ▼ or ▲ button on the remote to change the light intensity. All receivers in a zone will respond simultaneously.

Switching on/off

- F. Press the ▼ or ▲ button on the remote to switch the light on and off. All receivers in a zone will respond simultaneously.
- G. Press the ON or OFF button on the remote to switch all the connected light at the same time.

Memory

- H. On the remote there are 2 memory keys: M1 and M2. After you have set the correct dimm level, you can save it by holding the memory key for a few seconds. The lights will flash once to confirm.
- J. If one or more zones in a memory setting are switched off, please press and hold the ▲ key in the relevant zone to switch on the LED lights. Please note: this will not automatically be saved in the memory
- I. Repeat step H to change memory setting.

Reset

Press and hold the learning key on the receiver for 5 seconds to erase its memory. Repeat steps B-C to reconnect the receiver tot the remote.