

## 2. Modbus TCP setup

### Important

This type of connection is only possible if a Huawei WLAN-FE Smart Dongle is plugged to the inverter and the inverter built in wifi antenna is disconnected.

### 1. Open the Huawei SUN2000 app


[Download the app](#)

### 2. Connect the SUN2000 APP to the inverter Wi-Fi hotspot

Select manual connection and follow the steps, use the default password “**Changeme**” for the first login

### Attention

Turn off the phone mobile data or else the inverter will not be found by the app.

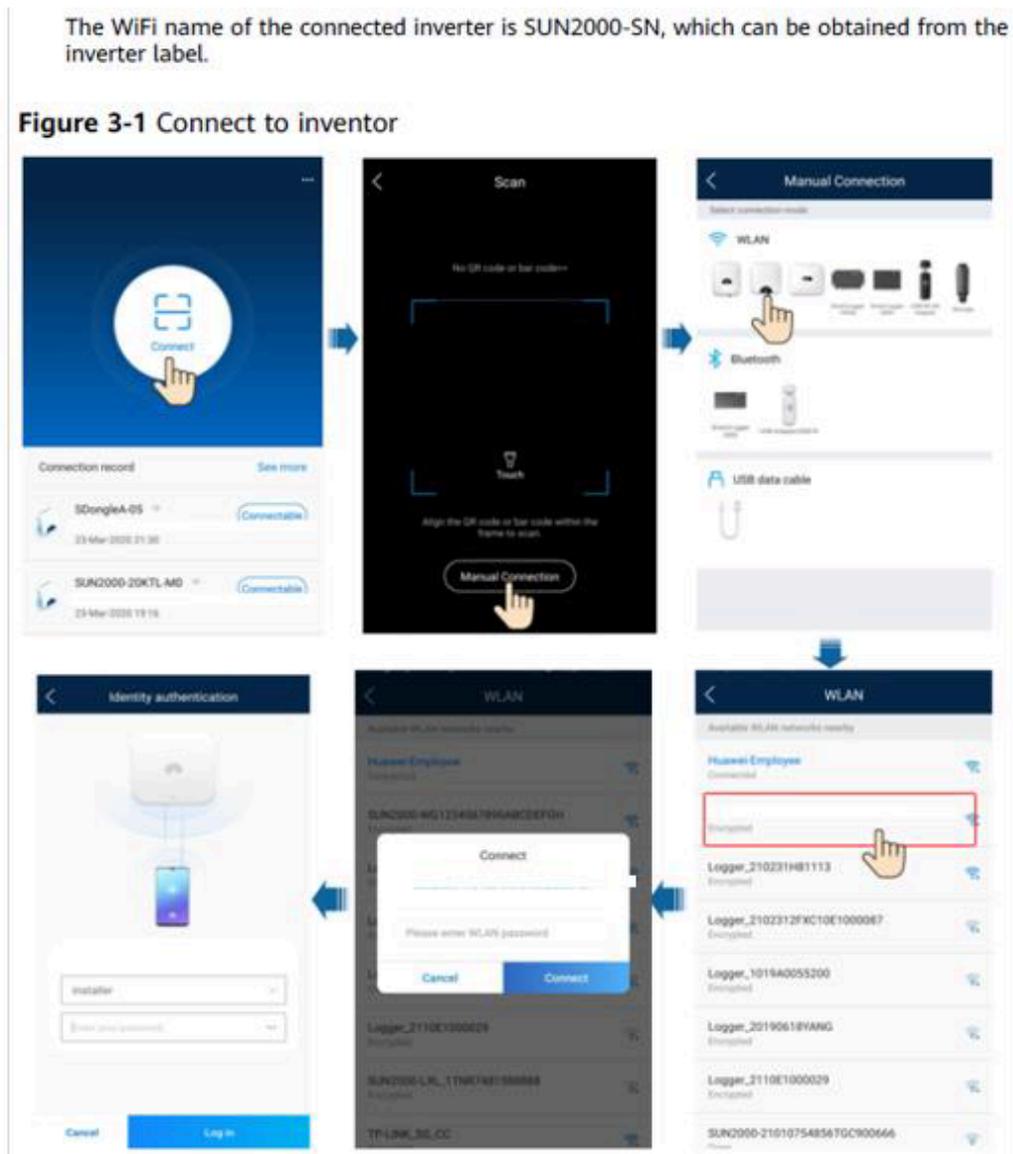

### 3. Log in to the inverter

Select installer, and enter the correct password, which defaults to “00000a”

#### Attention

If the password is not the default one, you can reset it by following the Manufacturer guide. Be sure to get the owner authorization prior to do it.

### Manufacturer guide for password reset

#### 4. Enable Modbus

On the home page, select:

Settings >> Communication configuration >> Dongle parameter settings >> Modbus-TCP >> Enable (unrestricted)

5. The inverter will be detected in the next 5 minutes by the FlexiObox, if that's not the case, check if the inverter and dongle firmware versions are at the minimum required:

Ensure that the firmware versions for inverter and dongle are at least the following:

#### Huawei firmware versions

<b>Device</b>	<b>Minimum Version Number</b>
SDongle-05	V100R001C00SPC127
SUN2000L	V200R001C00SPC115
SUN2000MA	V100R001C00SPC139

- Check the inverter firmware version

Connect the SUN2000 app to the inverter Wi-Fi hotspot and in the home page select:

Maintenance >> Upgrade device >> Current version

If a firmware upgrade is necessary, connect the inverter to the internet, and then, on the same screen, pick the package that appears on the list.

- Check the dongle firmware Version

Connect the SUN2000 app to the dongle Wi-Fi hotspot, enabled on the first 3 minutes after power on (same steps has connecting to the inverter but choose dongle instead), and on the home page select:

Maintenance >> Upgrade device >> Current version

If needed you can upgrade the dongle firmware by selecting:

Upgrade >> Manually

If a firmware update is necessary, download the most recent dongle firmware to your smartphone and then pick the file from your smartphone filesystem and follow the app steps.